





 FORD MODEL	Takim conta Gaskets set Pochettes de joints Dichtungssatze 	Silindir kapak contası Cylinder head gaskets Joint de culasse Zylinderkopf 	Emme manifold Contası Intake Manifold Collect. d'admission Ansaugkrümmer 	Egzos manifold contası Exhaust manifold Collect. d'echappement Auspuffkrümmer 	Egzos boğaz contası Exhaust pipe Tuyau d'echappement Auspuffrohr 	Supap kapak contası Rocker cover Cache-culbuteurs Zylinderkopfhaube 
FORD CARGO TURBO-TCI-INTERCOOL 7,3 Lt. DIESEL PS/2400 dd-Nm/2400 dd 2524-3230-3430 NHDD 6Cyl.	W-017 304		017 516 T211464 3x			017 307
FORD CARGO 1835-1838-1842 1846-1848-4135 240-300-320-350 380-3238 9.0 Lt 6Cyl.	W-017 504		017 314 3x			017 507








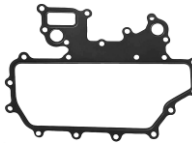

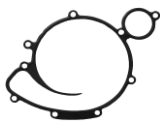






















S:Takim-Vollsatz-Full Set-Pochette Complete-Juego Complete

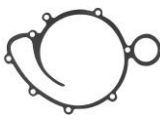W:FullSet Without CylinderHead Gasket

ES:Üst Takim-Zylinderkopfsatze-Head Sets-Pochette Rodage

CS:Alt Takim-Conversionsatze-Conversion Sets-Pochettes De Complement-Juegos Uplementarios

ES+CS:S

<p>Karter Oil pan Carter d'huile Olwanne</p> 	<p>Supap lastığı Valve stem Queue de soupape Ventilschaft</p> 	<p>Krank keçesi Crankshaft Vilebrequin Kurbelwelle</p> 	<p>Silindir kapak saptaması Screw set Pochette de vis Schraubensatz</p>	<p>SUITABLE TO: ADAPTABLE A: ADAPTABLE A: PASSEND FÜR:</p>    <p>FORD</p>
				 <p>NBR 017 307</p>  <p>2C466N782BA with rubber sheet 017 310</p>  <p>2C466A637AA with rubber sheet 017 323</p>  <p>with rubber sheet 017 311</p>  <p>sheet (3 sheets) 017 318</p>  <p>metallic (3 sheets) 017 516</p> <p>3x</p>  <p>with rubber sheet 017 324</p> <p>2x</p>  <p>sandwich klingerit 017 322</p>  <p>paper 017 325</p>  <p>with rubber sheet 017 328</p>  <p>sandwich klingerit 017 319</p>  <p>with rubber sheet 017 326</p> <p>2x</p>  <p>with rubber sheet 017 327</p> <p>2x</p>
				 <p>NBR 017 507</p>  <p>6C466N782AA with rubber sheet 017 517</p>  <p>2C466A637AA with rubber sheet 017 323</p>  <p>paper 017 511</p>  <p>2C469L461AA sheet (2 sheets) 017 619</p>  <p>metallic 017 314</p> <p>3x</p>  <p>with rubber sheet 017 324</p> <p>2x</p>  <p>paper 017 325</p>  <p>paper 017 510</p>  <p>sandwich klingerit 017 319</p>  <p>with rubber sheet 017 326</p> <p>2x</p>  <p>with rubber sheet 017 327</p> <p>2x</p>  <p>with rubber sheet 017 328</p>