




















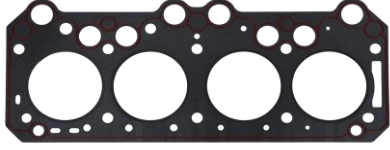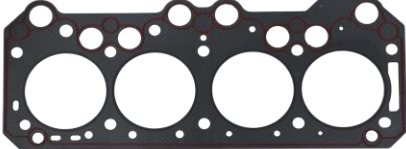















 <b>PEUGEOT MODEL</b>	Takım conta Gaskets set Pochettes de joints Dichtungssätze 	Silindir kapak contası Cylinder head gaskets Joint de culasse Zylinderkopf 	Emme manifold Contası Intake Manifold Collect. d'admission Ansaugkrümmer 	Egzos manifold contası Exhaust manifold Collect. d'echappement Auspuffkrümmer 	Egzos boğaz contası Exhaust pipe Tuyau d'echappement Auspuffrohr 	Supap kapak contası Rocker cover Cache-culbuteurs Zylinderkopphaube 
<b>404 C-CL(U7-U8-U10 504-505L-GR-GL-SR1971→ 1618-1796 cc 9/10 Cv Mot. XC7/XM7 (Carburador) 4 Cyl. 84 Ø</b>	<b>S-092 000 ES-092 001 CS-092 002</b>	<b>092 005</b> 0203-14 86,5 Ø 1,40 mm		<b>092 014</b> 0349-03	<b>476 021</b> 1721-01 <b>092 721</b> 1710-09 <b>092 021</b> 1710-07	<b>092 007</b> 0249-14
<b>J5 1000K 1981→ J5 1300 K 1796 cc 10 Cv Mot. XM7T 4 Cyl. 84 Ø</b>	<b>S-093 000 ES-093 001 CS-093 002</b>	<b>092 005</b> 0203-14 86,5 Ø 1,40 mm	<b>092 013</b> 0348-60	<b>092 014</b> 0349-03		<b>092 007</b> 0249-14
<b>J7 E-F-FP-F8-FS-FT 1618/1796 cc 9 Cv Mot.XC7P/XM7P J9 A10 1980→ 1618 cc 8 Cv Mot. XC7P 4 Cyl. 84 Ø</b>	<b>S-092 000 ES-092 001 CS-092 002</b>	<b>092 005</b> 0203-14 86,5 Ø 1,40 mm		<b>092 014</b> 0349-03	<b>476 021</b> 1721-01 <b>092 721</b> 1710-09 <b>092 021</b> 1710-07	<b>092 007</b> 0249-14
<b>504 L-GL-SL 1970→ 1971 cc 11 Cv Mot.XN1/XNA (Carburador) 4 Cyl. 88 Ø</b>	<b>S-091 500 ES-091 501 CS-091 502</b>	<b>091 505</b> 0209.F4 90 Ø 1,40 mm	<b>091 513</b> 0348-21 <b>092 013</b> 0348-60	<b>092 014</b> 0349-03	<b>092 721</b> 1710-09 <b>092 521</b> 1710-37	<b>092 007</b> 0249-14
<b>504 GLI-TI 1970→1984 1971 cc 11 Cv Mot. XN2 (Injection) 4 Cyl. 88 Ø</b>	<b>S-093 100 ES-093 101 CS-091 502</b>	<b>091 505</b> 0209.F4 90 Ø 1,40 mm	<b>093 113</b> 0348-18	<b>092 014</b> 0349-03	<b>092 721</b> 1710-09	<b>092 007</b> 0249-14
<b>505 GL-SL 1979→ 505 GR-SR 1971 cc 9/11 Cv Mot.XN1 (Carburador) 4 Cyl. 88 Ø</b>	<b>S-091 500 ES-091 501 CS-091 502</b>	<b>091 505</b> 0209-23 90 Ø 1,40 mm	<b>091 513</b> 0348-21 <b>092 013</b> 0348-60	<b>092 014</b> 0349-03	<b>092 721</b> 1710-09 <b>092 521</b> 1710-37	<b>092 007</b> 0249-14
<b>505 STI 1983→1986 1971 cc 9/11 Cv 604 SR (A18) 1982→1986 1971 cc 9 Cv Mot.XN6 (Injection) 4 Cyl. 88 Ø</b>	<b>S-093 100 ES-093 101 CS-091 502</b>	<b>091 505</b> 0209.F4 90 Ø 1,40 mm	<b>093 113</b> 0348-18	<b>092 014</b> 0349-03	<b>092 721</b> 1710-09	<b>092 007</b> 0249-14
<b>J5 1000K 1981→ J5 1300K 1971 cc 11 Cv Mot. XN1T 4 Cyl. 88 Ø</b>	<b>S-093 200 ES-093 201 CS-093 202</b>	<b>091 505</b> 0209.F4 90 Ø 1,40 mm	<b>092 013</b> 0348-60	<b>092 014</b> 0349-03		<b>092 007</b> 0249-14
<b>J9A30-31-33-35-39 1980→ J9B31/C30-33-36-39 J9 D33-35-39 1971 cc 9 Cv Mot. XN1P 4 Cyl. 88 Ø</b>	<b>S-091 500 ES-091 501 CS-091 502</b>	<b>091 505</b> 0209.F4 90 Ø 1,40 mm	<b>091 513</b> 0348-21 <b>092 013</b> 0348-60	<b>092 014</b> 0349-03	<b>092 721</b> 1710-09 <b>092 521</b> 1710-37	<b>092 007</b> 0249-14

S:Takim-Vollsatz-Full Set-Pochette Complete-Juego Complete  
 W:FullSet Without CylinderHead Gasket  
 ES:Üst Takim-Zylinderkopfsätze-Head Sets-Pochette Rodage  
 CS:Alt Takim-Conversionsätze-Conversion Sets-Pochettes De Complement-Juegos Uplementarios  
 ES+CS:S

Karter Oil pan Carter d'huile Ölwanne	Supap lastığı Valve stem Queue de soupape Ventilschaft	Krank keçesi Crankshaft Vilebrequin Kurbelwelle	Silindir kapak saplama Screw set Pochette de vis Schraubensatz	SUITABLE TO: ADAPTABLE A: ADAPTABLE A: PASSEND FÜR: <div style="display: flex; justify-content: space-around; align-items: center;">    </div>
<b>092 006</b> 0304-11 <b>092 029 (2x)</b> 0127-05	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x			 <p style="text-align: center;">092 005</p>  <p style="text-align: center;">091 505</p>   <p style="display: flex; justify-content: space-around;"> <span>092 006</span> <span>092 007</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>093 106</span> <span>091 531</span> <span>091 504</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>092 014</span> <span>091 513</span> <span>092 013</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>091 532</span> <span>093 113</span> <span>091 533</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>091 534</span> <span>091 535</span> <span>092 022</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>092 521</span> <span>476 021</span> <span>092 721</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>092 021</span> <span>cupper 091 536</span> <span>092 023</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>092 024</span> <span>092 025</span> <span>091 537</span> </p>    <p style="display: flex; justify-content: space-around;"> <span>4x rubber 091 538</span> <span>2x rubber 092 029</span> <span>2x rubber 091 539</span> </p>
<b>092 006</b> 0304-11 <b>092 029 (2x)</b> 0127-05	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x	<b>092 550</b> 0326-12 42x62x8 <b>092 050</b> 0526-03 16x21x14,5		
<b>092 006</b> 0304-11 <b>092 029 (2x)</b> 0127-05	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x	<b>092 550</b> 0326-12 42x62x8 <b>092 050</b> 0526-03 16x21x14,5		
<b>092 006</b> 0304-11 <b>092 029 (2x)</b> 0127-05	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x			
<b>092 006</b> 0304-11 <b>093 106</b>	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x			
<b>092 006</b> 0304-11 <b>092 029 (2x)</b> 0127-05	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x			
<b>092 006</b> 0304-11 <b>093 106</b>	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x			
<b>092 006</b> 0304-11 <b>092 029 (2x)</b> 0127-05	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x	<b>092 550</b> 0326-12 42x62x8 <b>092 050</b> 0526-03 16x21x14,5		
<b>092 006</b> 0304-11 <b>092 029 (2x)</b> 0127-05	<b>091 560</b> 7,5x9,8/13x10 J PTFE W 8x			